



FULLER-KINYON TYPE M PUMP PARTS IDENTIFICATION

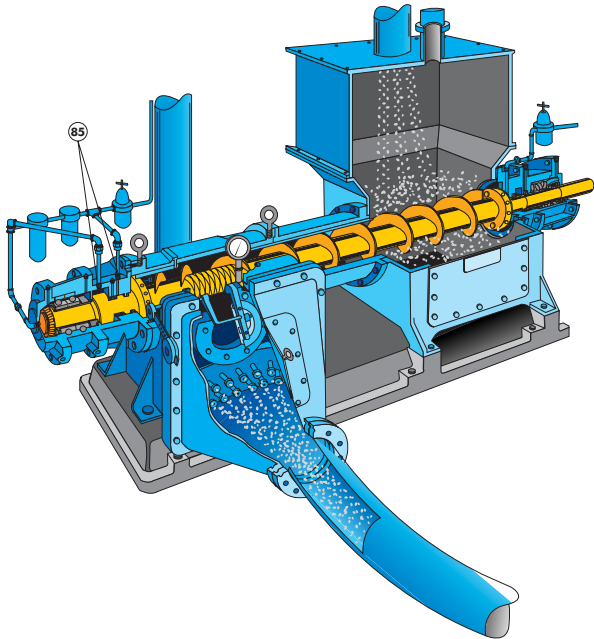

ITEM	REQ	NAME OF PART	ITEM	REQ	NAME OF PART	ITEM	REQ	NAME OF PART
1	1	HOPPER	27	1	BARREL BUSHING	57	1	SPACER
2	1	BARREL	28	1	BEARING RETAINER	58	2	GASKET
3	1	SIDE DISCHARGE HOUSING	29	1	FLAPPER VALVE ASSEMBLY	59	13	AIR NOZZLE
4	1	BEARING HOUSING SUPPORT	30	1	BLOW OUT LEVER	60	1	O-RING
5	2	BEARING HOUSING	31	1	BLOW OUT HANDLE	61	3	PIPE PLUG
6	1	BEARING RETAINER	32	1	PACKING GLAND	62		HEX. NUT
7	1	BEARING RETAINER - DRIVE END	33	1	SHAFT FOR BLOW OUT LEVER	63		HEX. HEAD CAPSCREW
8	1	BASE	34		SOC. SETSCREWS	64		LOCKWASHER
9	1	SCREW 9-9 9-10 WEAR SLEEVES	35	1	KEY	65		STUD
11	1	SCREW BUSHING - DISCHARGE END	36	2	STUD	66	3	HEX. HEAD CAPSCREW
12	2	HOPPER COVER	37	2	HEX. NUT	67		LOCKWASHER
13	2	HOPPER COVER GASKET	38	2	PACKING	68		HEX. HEAD CAPSCREW
14	1	DISCHARGE BODY	39	3	LIP SEAL	69		HEX. NUT
15	1	DISCHARGE BODY GASKET	40	2	O-RING	70		HEX. HEAD CAPSCREW
16	1	DISCHARGE BODY COVER	41	1	KEY	71		LOCKWASHER
17	1	COVER GASKET	43	2	BEARING	75	2	THREAD PROTECTOR
18	1	KEY	45	4	SETSCREWS	76		HEX. HEAD CAPSCREW
19	2	COUNTERWEIGHT	46	4	RING BOLT	78		PIPE PLUG
20	1	HEX. HEAD CAPSCREW	47	1	RING BOLT	79	1	NAMEPLATE
21	1	LOCKWASHER	49	2	BARREL BUSHING RETAINER BOLT	80	6	DRIVE SCREW
22	1	LOCK COLLAR	50	6	LIP SEAL	81		THREAD PROTECTOR
23	1	GREASE FITTING	51	2	GREASE RING	85	1	SEE SPECIFIC AIR PIPING DRAWING
24	1	BEARING HOUSING SUPPORT	53	4	REDUCER BUSHING	86	1	SCREW BUSHING ASSEMBLY
25	1	BARREL BUSHING	54	6	GREASE FITTING	88	1	ROTATION ARROW
26	1	BARREL BUSHING	56	2	SOCKET HEAD CAPSCREW			

REMEMBER TO USE THE SERIAL NUMBER WHEN ORDERING PARTS

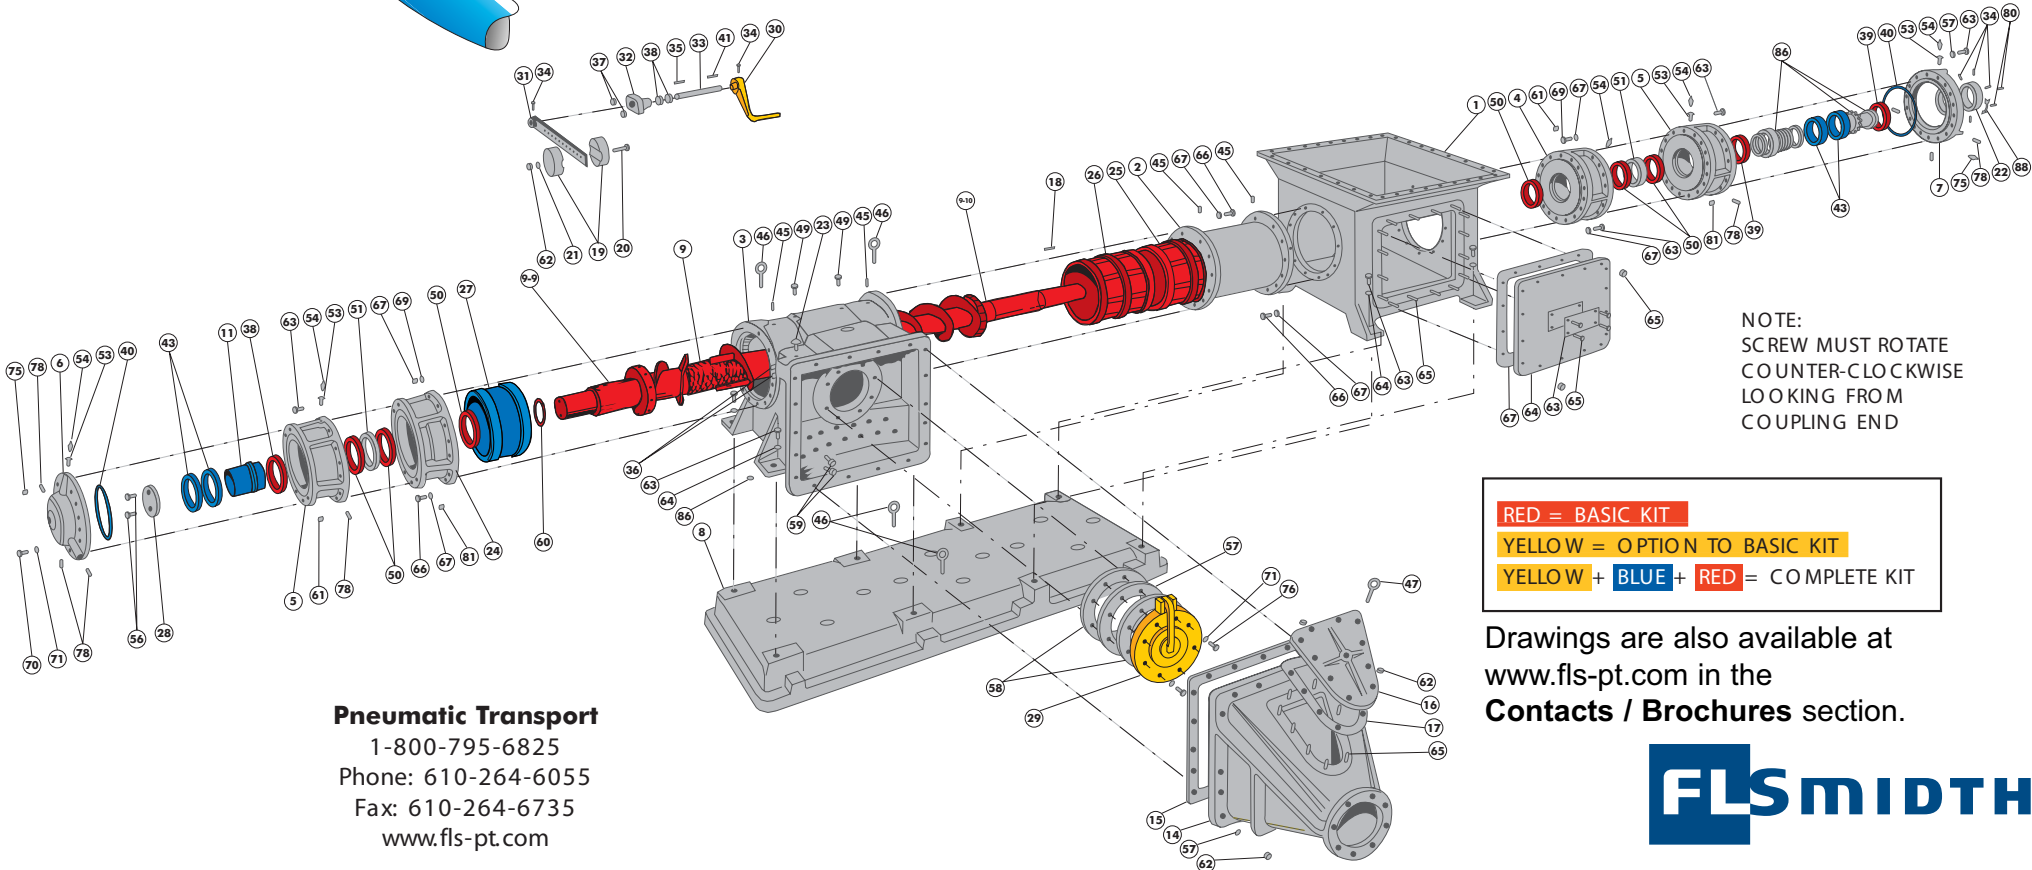

NOTE:
SCREW MUST ROTATE
COUNTER-CLOCKWISE
LOOKING FROM
COUPLING END

RED = BASIC KIT
YELLOW = OPTION TO BASIC KIT
YELLOW + BLUE + RED = COMPLETE KIT

Drawings are also available at
www.fls-pt.com in the
Contacts / Brochures section.

Pneumatic Transport
1-800-795-6825
Phone: 610-264-6055
Fax: 610-264-6735
www.fls-pt.com

